# DWA147W | smeg freestanding/built-in dishwasher

## ORBITAL WASH SYSTEM

Smeg's orbital wash system has two spray arms which operate simultaneously in opposite directions to ensure water is evenly distributed throughout the inner cavity for a perfect wash.

## DELAY START TIMER

Delay Start option allows for up to 24-hours delay start — allowing you to take advantage of off-peak energy usage times.

## TOTAL ACQUASTOP

Acquastop is a water safety device that operates when the dishwasher is not in operation by restricting mains pressure at the tap, and not at the dishwasher.

## ULTRAFAST PROGRAM

The Ultrafast program has been developed especially for slightly dirty dishes that are to be washed immediately after use. This program takes only 27 minutes.

| EAN | 8017709151553 |
|---|---|
| size | 598mmW x 850mmH x 595mmD |
| capacity | 14 placesettings |
| finish | white enamel |
| programs | seven —<br>soak, speedy 27 mins, normal eco 45, eco 50, intensive 65, strong and fast, ultra clean |
| baskets | grey rilson<br>upper: 3-level adjustment, EasyGlide<br>lower: double tilting rack |
| wash system | orbital<br>upper spray arm<br>six spray directions |
| timer | 1–24 hour delay timer |
| filtration | 5-stage water filtration system |
| drying | natural condenser |
| safety | TOTAL ACQUASTOP<br>LED on/off light<br>end-cycle acoustic indicator<br>self-balancing hinges |
| noise | 43 dBA (built-in) |
| water | 12.6 litres |
| energy | 1.9 kWh, 10 amps |

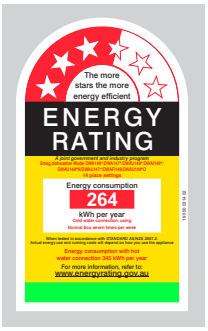

# DWA147W | smeg freestanding/built-in dishwasher

## SAVE ON ENERGY AND PROTECT THE ENVIRONMENT

- always try to run the dishwasher full loaded
- do not wash dishes in running water
- use the washing program that is most appropriate for each type of load
- do not carry out any preliminary rinsing
- if available, connect the dishwasher to a hot water supply up to 60°C

The phosphates contained in dishwasher detergents are harmful to the environment. To avoid using excessive amounts of detergent and to save on electricity, observe the following:

- separate the more delicate items from dishes that are more resistant to aggressive detergents and high temperaures;
- do not pour the detergent directly onto the dishes.

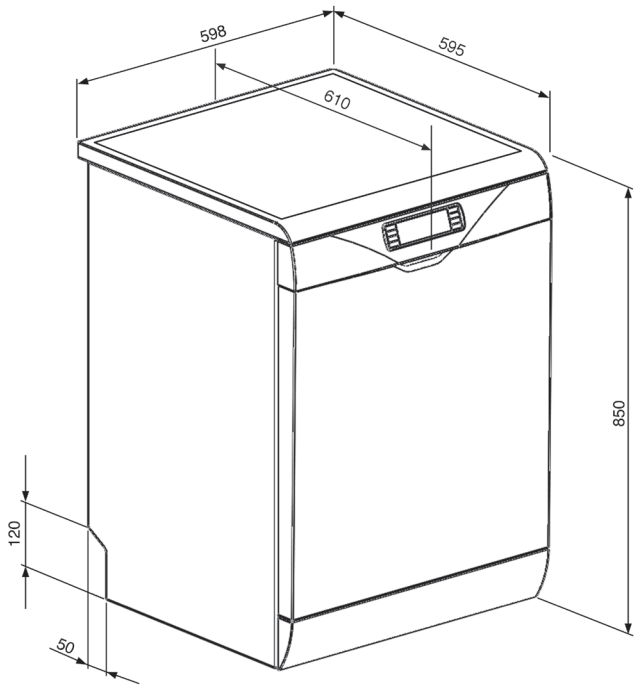


**PLEASE NOTE: drawings are not to scale. They are to assist only.**

| PROGRAM | LOAD | PROGRAM PROGRESS | DURATION | CONSUMPTION | |
|---|---|---|---|---|---|
| | | | minutes | water litres | power kWh |
| SOAK | pans and dishes awaiting completion of load | cold prewash | 15 | 3.5 | 0.02 |
| RAPID | lightly soiled dishes, washed immediately after use | wash at 38°C<br>rinse at 50°C | 27 | 6.5 | 0.70 |
| NORMAL<br>ECO | crockery and cutlery normally soiled | cold prewash<br>wash at 45°C<br>rinse at 45°C \| dry | 147 | 12.6 | 0.71 |
| ECO | dishes with normal dirt, with dried-on residue | cold prewash<br>wash at 55°C<br>cold rinse<br>rinse at 70°C \| dry | 100 | 11 | 1.3 |
| INTENSIVE | dishes with normal dirt, even with dried-on residue | cold prewash<br>wash at 65°C<br>cold rinse<br>rinse at 70°C \| dry | 115 | 13.5 | 1.35 |
| STRONG AND FAST | mixed dishes with normal dirt, without dried-on residue | wash at 65°C<br>2 cold rinses<br>rinse at 70°C | 135 | 15.5 | 1.60 |
| ULTRA CLEAN | very dirty pans and dishes, with dried-on residue | prewash at 40°C<br>wash at 70°C<br>2 cold rinses<br>rinse at 70°C<br>dry | 160 | 15.5 | 1.70 |

WARNING: technical specifications and product sizes can be varied by the manufacturer without notice. Cutouts for appliances should only be by physical product measurements. The above information is indicative only.

ID080812
Code DWA147W